
## ADVER-FLAG



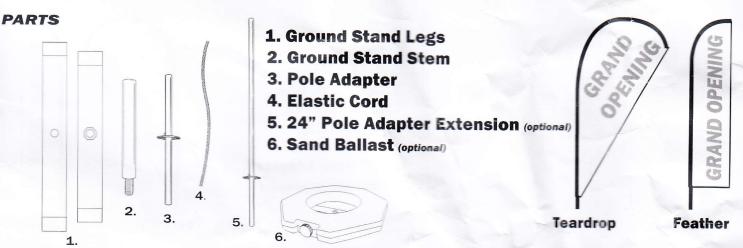




**ASSEMBLY** 




2. Take the cord and fold it in half, looping it through the grommet and threading the rest of the cord through the loop.

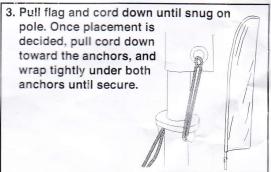

4. Next, setup the ground stand system by placing the legs across one another with the nut of the leg facing the ground.

bottom

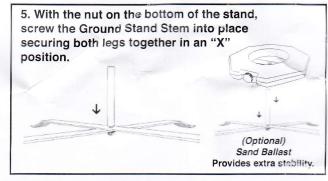

6. Place the Pole Adapter into the Ground Stand Stem, and then place the flag onto the Pole Adapter. Note: If using the 24" Pole Adapter Extension, insert it into Ground Stand Stem, then place the Pole Adapter and flag atop of the Extension.

### ! GUIDES AND PRECAUTIONS !

- Flag system may be damaged in winds exceeding 35 km/hr.
   PLEASE DO NOT USE IN INCLEMENT WEATHER.
- Do not use near overhead wires, if not used correctly it may result in injury or death.
- Must have rotational movement.
   Keep at least 5ft away from any objects to increase life expectancy of flags. IE Fences,
   Trees, Buildings Etc.

# DVER-FLA


FEATHER AND TEARDROP GROUND SLEEVE ASSEMBLY INSTRUCTIONS



PARTS



- 1. Ground Sleeve
- 2. Pole Adapter
- 3. Driving Rod
- 4. Extractor Tee
- 5. Ground Cap
- 6. Elastic Cord
- 7. 24" Pole Adapter Extension (optional)

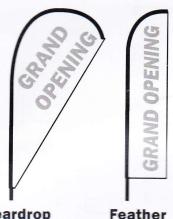

Teardrop


the loop.

Feather


#### **ASSEMBLY**




2. Take the cord and fold it in half, looping it through the grommet and threading the rest of the cord through

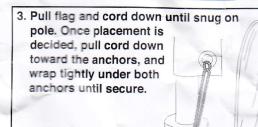


4. Next, install the ground sleeve system by placing the Driving Rod into the Ground Sleeve and drive sleeve into ground until top of nut is flush with the earth.

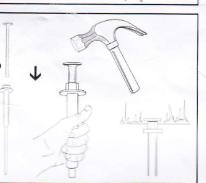

5. Place the Pole Adapter into the Ground Sleeve. Next, place the flag onto the Pole Adapter. When not in use, place the Ground Cap into the Ground Sleeve. Note: If using the 24" Pole Adapter Extension, insert into Ground Sleeve and then place Pole Adapter and flag atop of Extension.

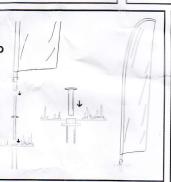

6. To Remove: Thread Extractor Tee into Ground Sleeve, slide Driving Rod through Extractor Tee and pull Ground Sleeve from the ground.

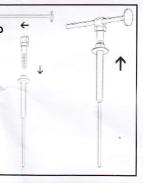

### ! GUIDES AND PRECAUTIONS !

- Flag system may be damaged in winds exceeding 35 km/hr. PLEASE DO NOT USE IN **INCLEMENT WEATHER.**
- Do not use near overhead wires, if not used correctly it may result in injury or death.
- Must have rotational movement. Keep at least 5ft away from any objects to increase life expectancy of flags. IE Fences, Trees, Buildings Etc.